



D6 PRO Wi-Fi DUCTLESS CONTROLLER

Quick Guide

Display sleep

The controller goes into Display sleep (the screen is dim) after 45 seconds of inactivity. Press **O** to wake up the controller. This button push does not change temperature or settings.

Room temperature

Any time the controller is not being interacted with, the current room temperature is displayed on screen.

Viewing set temperature

Be sure the controller is not in Display sleep, then press **+** or **-** once to view the current set temperature. The set temperature will “pulse” on screen. After a short period of time the screen will change to display the room temperature.

Change temperature

1. Be sure the controller is not in Display sleep, then press **+** or **-** more than once to change the set temperature so it is higher or lower in the current mode.
2. Stop pressing **+** or **-** when you reach the temperature you want.
3. The screen will pulse and then return to the room temperature display.



Warmer





Cooler



Change mode

1. Be sure the controller is not in Display sleep, then press  to change the system mode.
 2. Stop pressing  when you reach the mode you want.
- The ductless unit will beep when it gets a command from the controller.



Symbol	Mode
	Heat mode - the ductless unit warms the space to the temperature shown on the controller.
	Cool mode - the ductless unit cools the space to the temperature shown on the controller.
[screen is blank]	Off mode - the ductless unit is turned off



resideo

www.resideo.com

Resideo Inc., 1985 Douglas Drive North,
Golden Valley, MN 55422



33-00388-05

33-00388-05 M.S. Rev. 09-19 | Printed in United States

This product is manufactured by Resideo Technologies, Inc., Golden Valley, MN, 1-800-633-3991.
© Resideo Technologies, Inc. The Honeywell Home trademark is used under license from Honeywell International Inc. All rights reserved.