

# Steam Humidifier


Honeywell

This is a legacy product document supported by Resideo. It is no longer manufactured

ADDENDUM

## RO System with Tank Only

See the instruction sheet packaged with the RO Filtration System for complete installation instructions.

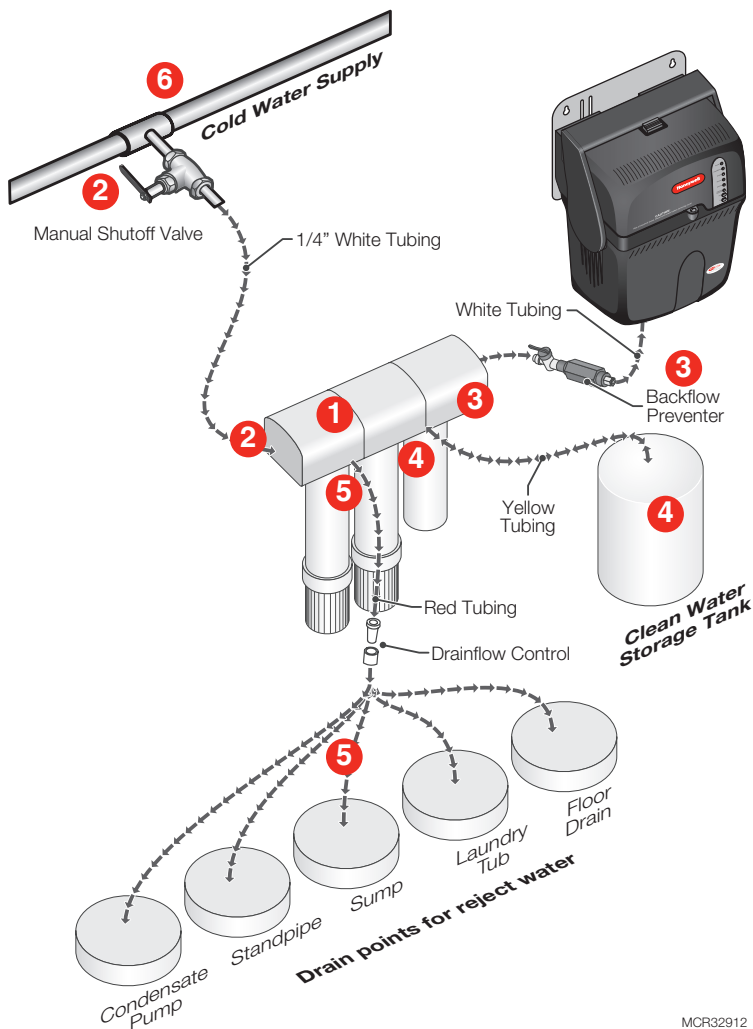

1. Mount the base chassis to a surface capable of holding up to 7 pounds between the home's cold water line and the steam humidifier location. (Mounting hardware is provided.)
2. Connect the 1/4-inch white water line to the home's main cold water supply. Connect the other end to the inlet port on the base chassis.
3. Connect the 1/4-inch white water line to the outlet on the base chassis. Connect the other end to the backflow preventer. Connect another water line between the backflow preventer and the steam humidifier supply fitting.
4. Connect the yellow water line to the outlet port on the clean water storage tank. Connect the other end to the yellow inlet port on the RO Filter System.
5. Connect the red tubing to the reject water port on the base chassis, and to a suitable drain on the other end.

**IMPORTANT:** Refer to and follow local codes for proper drain installation. Refer to additional drain requirements in the steam humidifier installation guide when coupling the RO Filter drain with the steam humidifier drain.

### Automation and Control Solutions

Honeywell International Inc.

1985 Douglas Drive North

Golden Valley, MN 55422

<http://customer.honeywell.com>

© U.S. Registered Trademark.  
© 2014 Honeywell International Inc.  
69-A2285-01 M.S. 12-14  
Printed in U.S.A.



69-A2285-01